

Description

Murphy offers two types of diesel fuel line valves: check valves and pressure relief valves.

The CKV series check valves are in-line, one-way valves that prevent fuel from being siphoned back into an injector or injection pump which could delay a shutdown.

There are two types of check valves: CKV2336 and CKV1WPS. The CKV2336 has a 1/4 NPT threaded male connection on each end for connecting to fuel line fittings or hoses. The CKV1WPS check valve is typically mounted in the fuel bypass line of the last fuel injector. The CKV1WPS features a hollow bolt connection and a barbed, 1/8 NPT connection for flex hose or fitting.

The PRV series pressure relief valves, relieve overpressure in a fuel system usually caused by closing of a solenoid fuel valve. The PRV50 and PRV70 have a 1/4 NPT threaded connection on each end for connecting to fuel line fittings or hoses.

Specifications

Materials			
	Body	Seal	Spring
CKV2336	Brass	Poppet	SS
CKV1WPS	Brass	SS	SS
PRV50/PRV70	Brass	SS	SS


Note: SS=Stainless steel.

Opening Pressure	
CKV2336	4 psi (27)
CKV1WPS	2 psi (14)
PRV50	25 psi (172)
PRV70	70 psi (483)

Note: metric (kPa) equivalents in parenthesis. Static Pressure (all): 150 psi (1.03 MPa) maximum

Weight: CKV2336: 1.3 oz (40.5 grams) CKV1WPS: 1.3 oz (40.5 grams) PRV50/PRV70: 1.3 oz (40.5 grams)

Dimensions

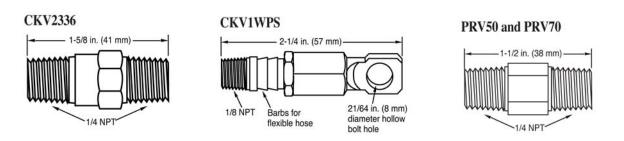


In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Murphy Industries, LLC. This document, including textual matter and illustrations, is copyright protected by Murphy Industries, LLC, with all rights reserved. (c) 2010 Murphy Industries, LLC.

Basic Operation

Murphy Check Valves and Pressure Relief Valves enhance at the operation of diesel engine shutdown valves by reducing the time required for complete engine shutdown after the solenoid valve closes. The diagram to the right shows a typical installation using CKV check valves and PRV pressure relief valves. **All valves are shown closed.**

Check Valves close off the fuel return line(s) to prevent fuel or air from re-entering the injection system through the bypass line(s). Models **CKV2336** (3) is an in-line valve. Model **CKV1WPS** (2) has a 21/64 in. (8 mm) banjo fitting that attaches to the return line of the final injector. All check valves allow fuel to flow away from the injectors but close to prevent fuel from flowing in the reverse direction.

The **PRV50** and **PRV70** (1) relieve pressure buildup in the fuel system that can cause fuel filter canisters to burst. When the solenoid valve closes to stop the engine, the fuel transfer pump will continue to produce pressure as the engine slows down to stop. This pressure buildup, if not relieved, can cause fuel filter canisters or gaskets to leak. PRV's are installed in the bypass line from the fuel filter(s) to the fuel return line.

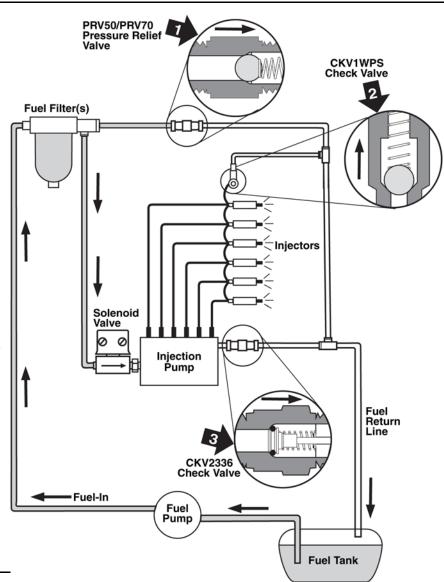

How to Order

Specify model number:

CKV2336 CKV1WPS PRV50 PRV70 Note: there are no replacement parts.

FW MURPHY

P.O. Box 470248 Tulsa, Oklahoma 74147 USA Phone: +1 918 317 4100 Fax: +1 918 317 4266 E-mail: sales@fwmurphy.com INDUSTRIAL PANEL DIVISION

Fax: +1 918 317 4124 E-mail: ipdsales@fwmurphy.com

MURPHY POWER IGNITION Web site: www.murphy-pi.com CONTROL SYSTEMS & SERVICES DIVISION P.O. Box 1819 Rosenberg, Texas 77471 USA Phone: +1 281 633 4500 Fax: +1 281 633 4588

E-mail: css-solutions@fwmurphy.com

FRANK W. MURPHY LTD.

Church Road, Laverstock Salisbury, SP1 10Z, UK Phone: +44 1722 410055 Fax: +44 1722 410088 E-mail: sales@fwmurphy.co.uk Web site: www.fwmurphy.co.uk

COMPUTRONIC CONTROLS 41 - 46 Railway Terrace Nechells, Birmingham, B7 5NG, UK Phone: +44 121 327 8500 Fax: +44 121 327 8501 E-mail: sales@computroniccontrols.com Web site: www.computroniccontrols.com

www.fwmurphy.com

FW MURPHY INSTRUMENTS (HANGZHOU) CO., LTD. 77 23rd Street

Hangzhou Economic & Technological Development Area Hangzhou, Zhejiang, 310018, China Phone: +86 571 8788 6060 Fax: +86 571 8684 8878 Email: apsales@fwmurphy.com



12/02/09

Warranty - A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to http://www.fwmurphy.com/warranty